

Waterman's

PRICE LIST OF SEPARATE PARTS.

OUR SERVICE DEPARTMENT is maintained for the convenience of our customers in cases of loss or accident. All correspondence receives prompt and careful attention. Whenever a new gold nib is wanted, or any readjustment of parts is necessary, the complete holder must be sent to us, otherwise satisfactory service cannot be given. **All parts are guaranteed perfect.**

If the nib is not suited to the owner's hand, it will be exchanged, if returned in good condition, free of charge by L. G. SLOAN, Ltd.

When sending by post, please enclose a steel pattern nib which suits your hand, together with 3d., the cost of return Postage and Private Insurance.

REGULAR TYPE.

No. on Holder.	Gold Nibs—A		B	C	D	E	F
	New Nib	Allowance on old.	Feed Bar.	Point Section.	Barrel.	Cap.	Clip Cap and Band.
12—12½—72—72½	7/-	1/-	3/3	3/3	3/3	1/-	
14—74	10/-	1/6	3/3	3/3	4/6	1/-	
15—75	12/6	2/-	3/3	3/3	5/6	1/3	
16—76	15/-	2/6	3/3	3/3	6/6	1/6	
17	16/6	3/-	4/6	4/6	8/6	2/6	
18	20/-	4/6	4/6	4/6	8/6	2/6	

SAFETY TYPE.

New No.	Gold Nibs.		Feed Bar.	Interior Spiral.	Barrel.	Cap.	Clip Cap and Band.
	New Nib.	Allowance on Old.					
41—41½—41½V.	4/6	6d.	3/3	3/3	3/3	1/-	
42—42V—42½	7/-	1/-	3/3	3/3	3/3	1/-	
44	10/-	1/6	3/3	3/3	4/6	1/-	
45	12/6	2/-	3/3	3/3	5/6	1/3	
46	15/-	2/6	3/3	3/3	6/6	1/6	
48	20/-	4/6	4/6	4/6	8/6	2/6	

SELF-FILLING TYPE.

New No.	Gold Nibs.		Sections and Feed Bars, each.	Barrel.	Cap.	Clip Cap and Band.
	New Nib.	Allowance on Old.				
51V—R.R.	4/6	6d.	2/-	3/-	9d.	
52—52V—52½	7/-	1/-	3/3	5/6	1/-	
54	10/-	1/6	3/3	6/6	1/-	
55	12/6	2/-	3/3	7/6	1/3	
56	15/-	2/6	3/3	8/6	1/6	
58	20/-	4/6	4/6	8/6	2/6	
5, with Inlay Colour Band	12/6	2/-	3/3	7/6		9/-
7, with Inlay Colour Band	15/-	2/6	4/6	8/6		9/3
Patrician Pens	18/6	3/-	4/6	10/6		17/6

Sacs (all sizes), 1/- each. Manifold Nibs can be fitted to any pen (extra charge of 2/6 for Nos. 2 and 4 holders). Accountants' Nibs, all sizes, 2/6 extra. Numbers are stamped on the butt end of every holder. For prices of Barrels with Rolled Gold Levers add 1/- to above prices, except the No. 5, No. 7 and Patrician Series, which are only supplied with Rolled Gold Levers.

When Caps are required for the Self-Filling or Safety types, it is necessary to send the holders to us to have same fitted.

SPECIAL DIRECTIONS.

Empty out the ink before posting a fountain pen. Please enclose your name and address with the package. To ensure safety, packages should always be registered.

Sole Representatives for Europe, British Colonies and Dependencies (Canada excepted)—

L. G. SLOAN, Ltd., "The Pen Corner," 41, Kingsway, London, W.C. 2, England. (P.O. Box 163).

Manufactured by the L. E. Waterman Co., 191, Broadway, New York, U.S.A., and Canada.

Waterman's

THE REGULAR TYPE.

The most perfect piece of mechanism can be made to work badly by careless handling. Here-with are a few suggestions which should be of value to those who wish to get the best service from this pen.

Carry it in the pocket with the nib upright.

Lay it down so that the nib will be raised an inch or more.

Open the vent holes in the cap if the pen is to be carried in the pocket, otherwise the warmth of the body will cause it to sweat inside the cap. The vent holes are closed with red wax, so that they may easily be seen.

The cap may best be removed, or put in place, with a slight twist, which will cause it to move easily without suction or jarring. This should be done with the pen upright. If the inside of the cap becomes soiled, clean it, otherwise it will soil the neck of the pen and then your fingers.

To clean : Unscrew the point section and allow cold water to run through it. The barrel can be rinsed out repeatedly until it is clean. **Hot water should not be used, as it destroys the polish of the rubber.**

To fill : Unscrew the point section and by the use of the glass dropper, fill the barrel nearly full of ink. Dry off the end of the barrel and the screw threads before closing, and then screw up firmly. If the point section does not unscrew readily, a piece of elastic band put round it will afford an effective grip.




Waterman's Ink. Made in 6 colours. Best for all pens.

Waterman's

THE SAFETY TYPE.



Fig. 1.

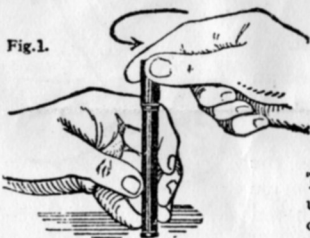

When the Safety Type Waterman's Ideal is closed, it is, in effect, a bottle, with the cap as cork. Consequently, when the cap is removed the pen must be held upright or the contents will spill, but while closed it can be carried in any position and will not leak.

TO OPEN : Hold the pen upright in one hand and unscrew the cap with the other (see Fig. 1). Next, fit cap on the other end of the barrel (still holding pen upright) and screw until the nib is in the correct

writing position (see Fig. 2). Do not overscrew—force is not necessary—you will know when it is tight enough just as you know when you have wound your watch sufficiently.

TO CLOSE : Hold the pen upright, reverse the process, unscrewing until the nib is entirely below the top of the barrel. This is important, for if the nib is left above the level of the barrel, the point will be bent or broken. Then screw cap on firmly and you may carry the pen in any position.

TO FILL : Hold the pen upright, unscrew the cap and while the nib is lowered in the barrel, drop the ink into the open end drop by drop (see Fig. 3) to within quarter of an inch from the top.

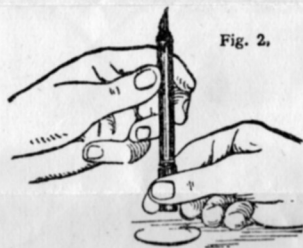


Fig. 2.

TO CLEAN : Remove the cap and hold the barrel underneath tap and let the cold water flow into the holder for a minute or so. Do not take the pen to pieces in any circumstances.



Fig. 3.

Waterman's

THE SELF-FILLING TYPE.

(Pat. No. 5790/15)

With boxed-in lever.

The Self-Filling device incorporated in this type of Waterman's Ideal is not only the simplest, it is easily the most efficient. It operates quickly and reliably, does not get out of order and is never in the way.

This Pen being fitted with the "Spoon Feed" will continue writing without flooding until the last drop of ink has been used.

TO FILL : Raise the lever, immerse the nib in the ink until entirely covered, let the lever go back, *pause for a second*, press it home—and the pen is filled.

TO CLEAN : Proceed as in filling, using cold water instead of ink. Raise the lever several times and the pen is cleaned.



The Little Lever.


IMPORTANT.

To remove the screw-lock security cap, give short turn from left to right. To replace, turn reverse way—right to left—until it is firmly screwed.

If there is any ink in the barrel always hold the pen over an ink bottle when raising the lever.

After filling, at once wipe off any ink there may be on the point section.

Always hold the pen upright when putting on or taking off the cap ; it is better, also, to carry the pen in an upright position.

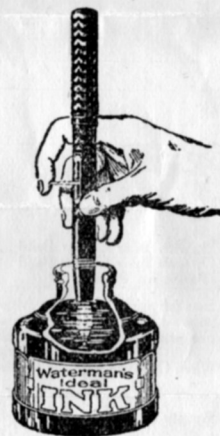

Waterman's Writing Sets—over 40 different styles.

58 Overdale Rd. Ealing W5.

There is a Waterman's Pencil to match every Pen.

A. B. Roswell